


New Hydraulic Check Valve

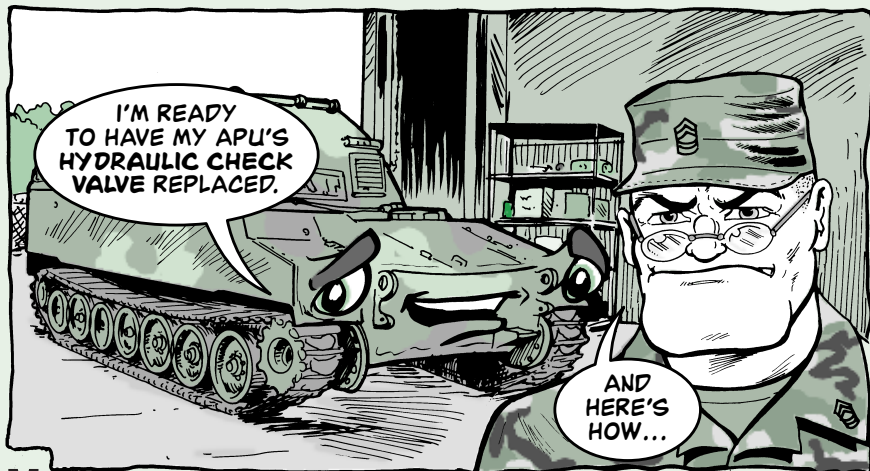

Mechanics, the hydraulic check valve, NSN 4820-00-732-3944, for the FAASV's auxiliary power unit (APU) is being replaced.

When the check valve goes bad, order check valve, NSN 4820-01-107-6115, and pipe elbow, NSN 4730-00-852-5654, to replace it.

Here's how to install the new valve:

1. With the vehicle shut down, remove the APU pump's inlet hose and adapter from the old check valve.
2. Remove the old valve from the tee. Toss the valve.
3. Install the new pipe elbow and check valve into the tee. Make sure the valve's arrow markings point in the direction of the tee.
4. Install the adapter into the check valve, then reattach the inlet hose assembly into the adapter.



Install new hydraulic check valve and pipe elbow